

Fig.1.

		WORD ADDRESS		BYTE ADDRESS	INSTRUCTION NUMBER
101	X	0	0	0	0
	X	0	0	0	1
	X	0	0	1	2
	X	0	0	1	3
102	X	0	0	1	4
	13 cj	0	0	1	5
	X	0	0	1	6
	0 cj	0	0	1	7
103	X	0	1	0	8
	13 cj	0	1	0	9
	X	0	1	0	10
	X	0	1	0	11
104	16 j	0	1	1	12
	X	0	1	1	13
	2 cj	0	1	1	14
	X	0	1	1	15
105	X	1	0	0	16
	X	1	0	0	17
	X	1	0	0	18
	X	1	0	0	19

Fig.2.

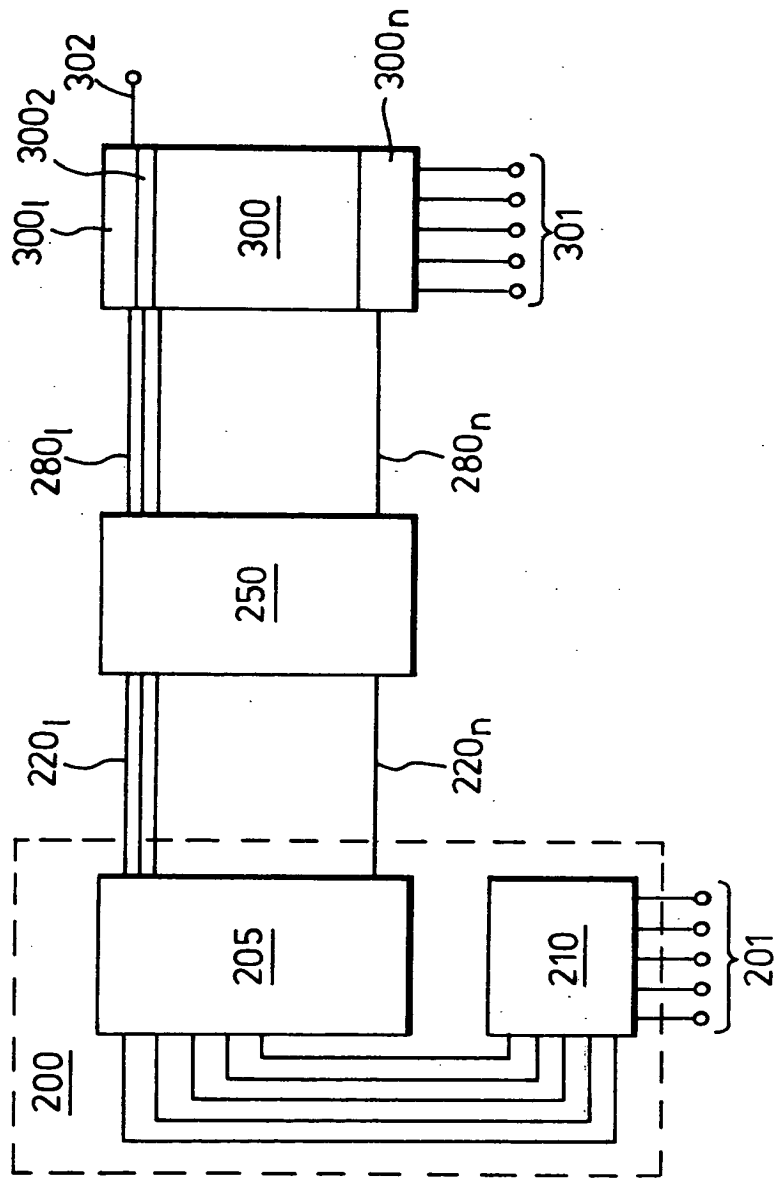
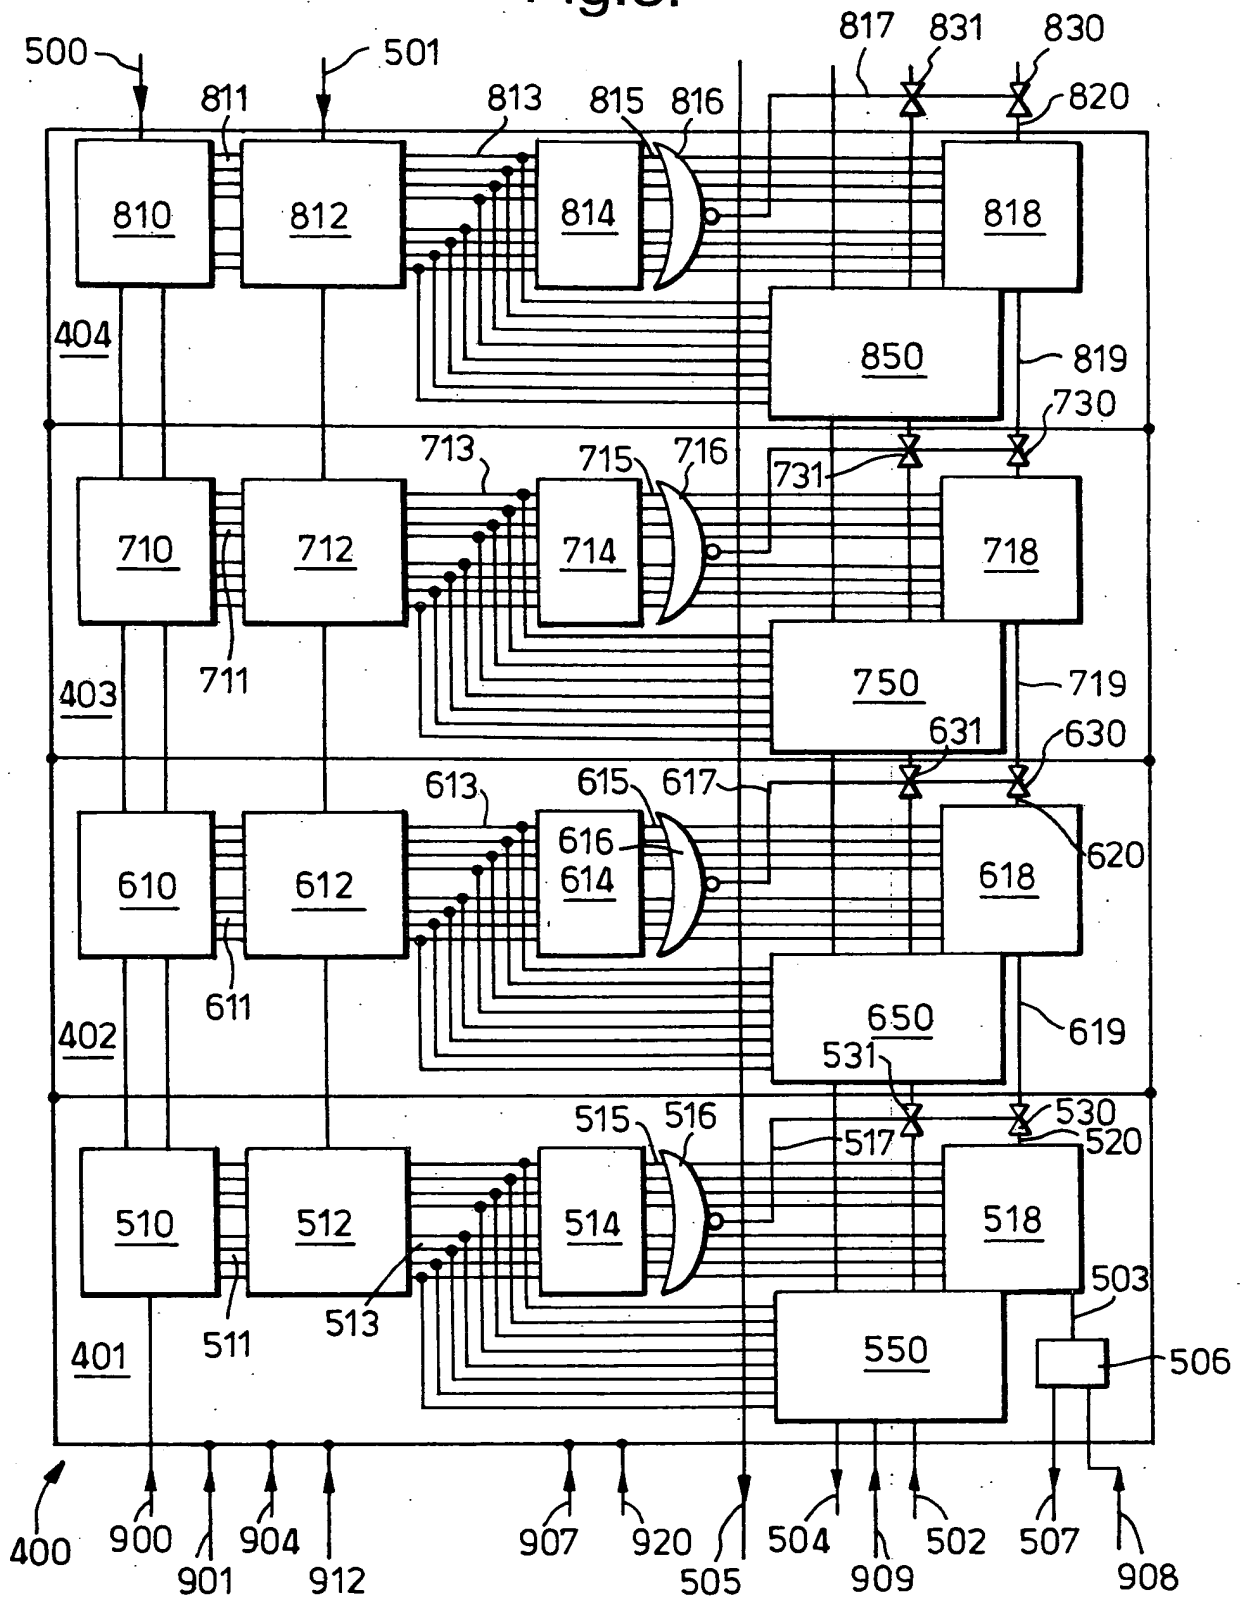


Fig.3.



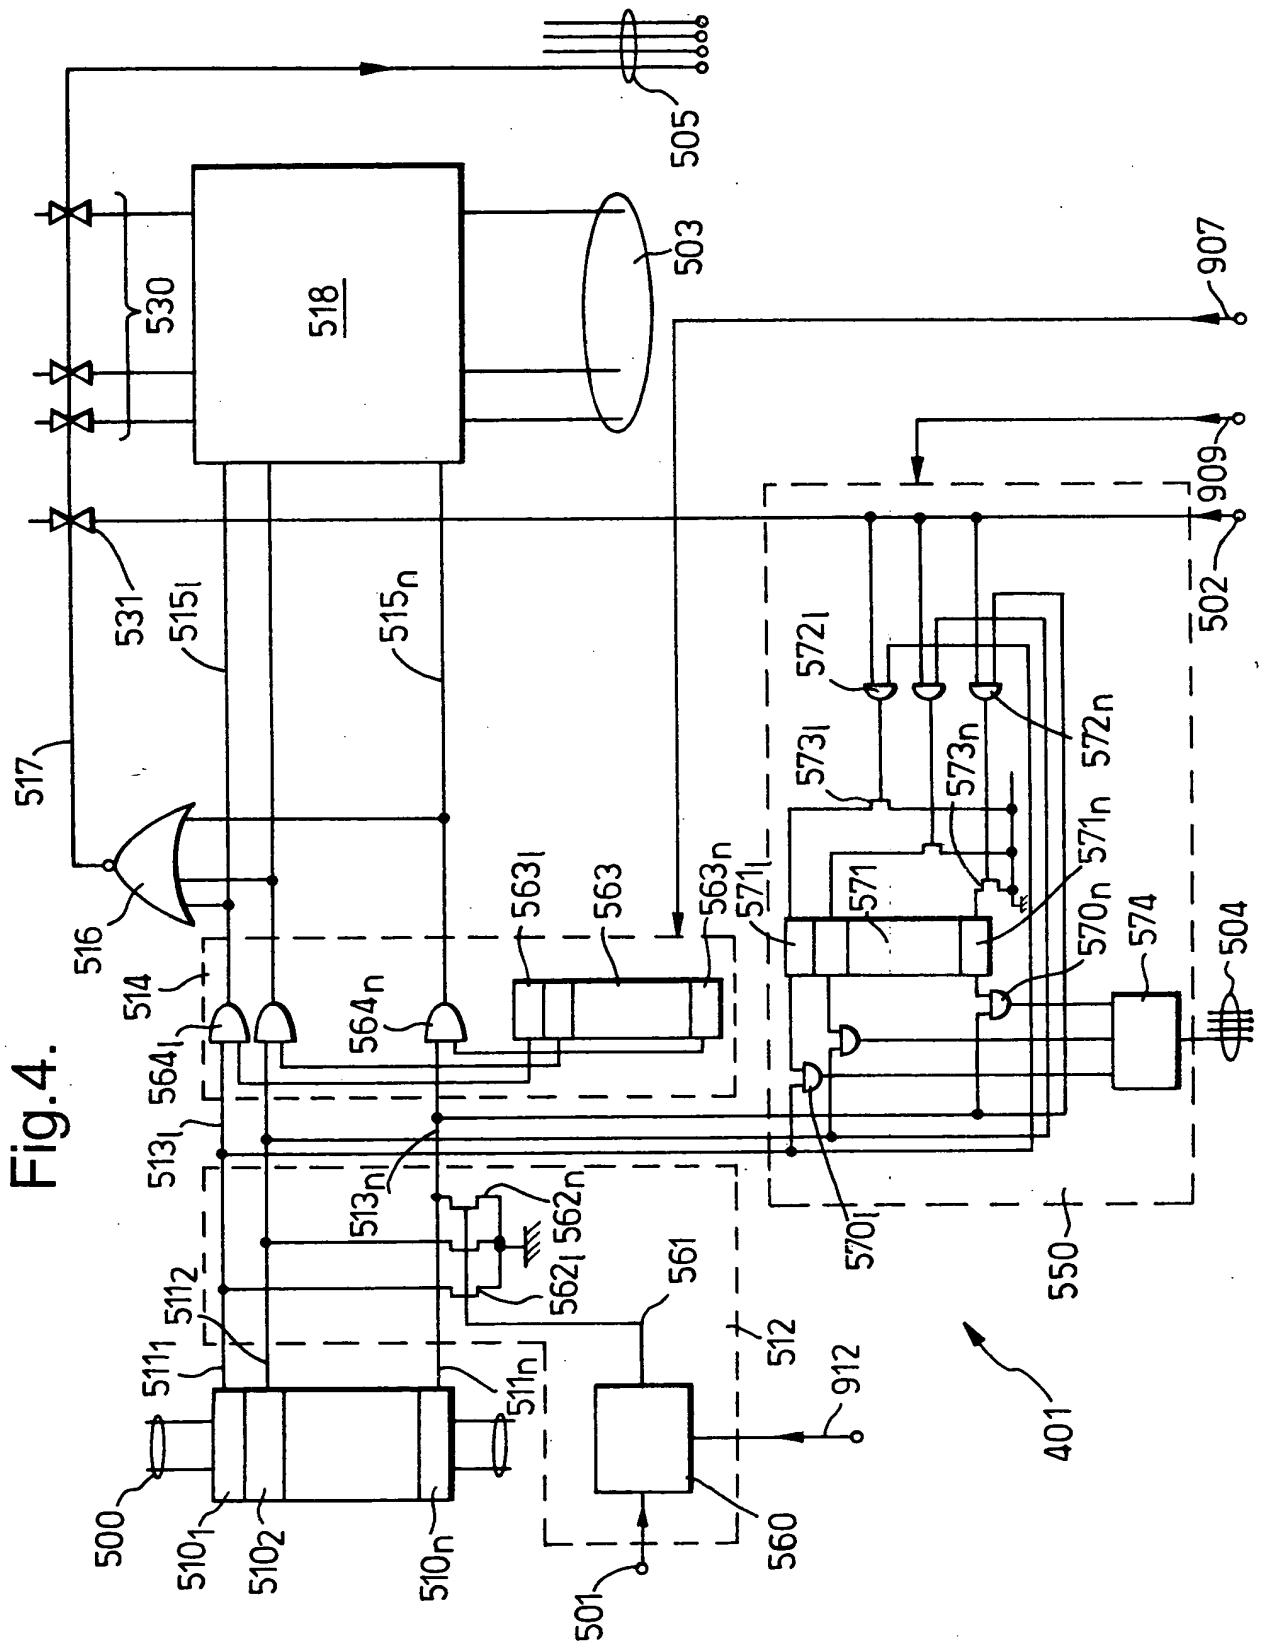
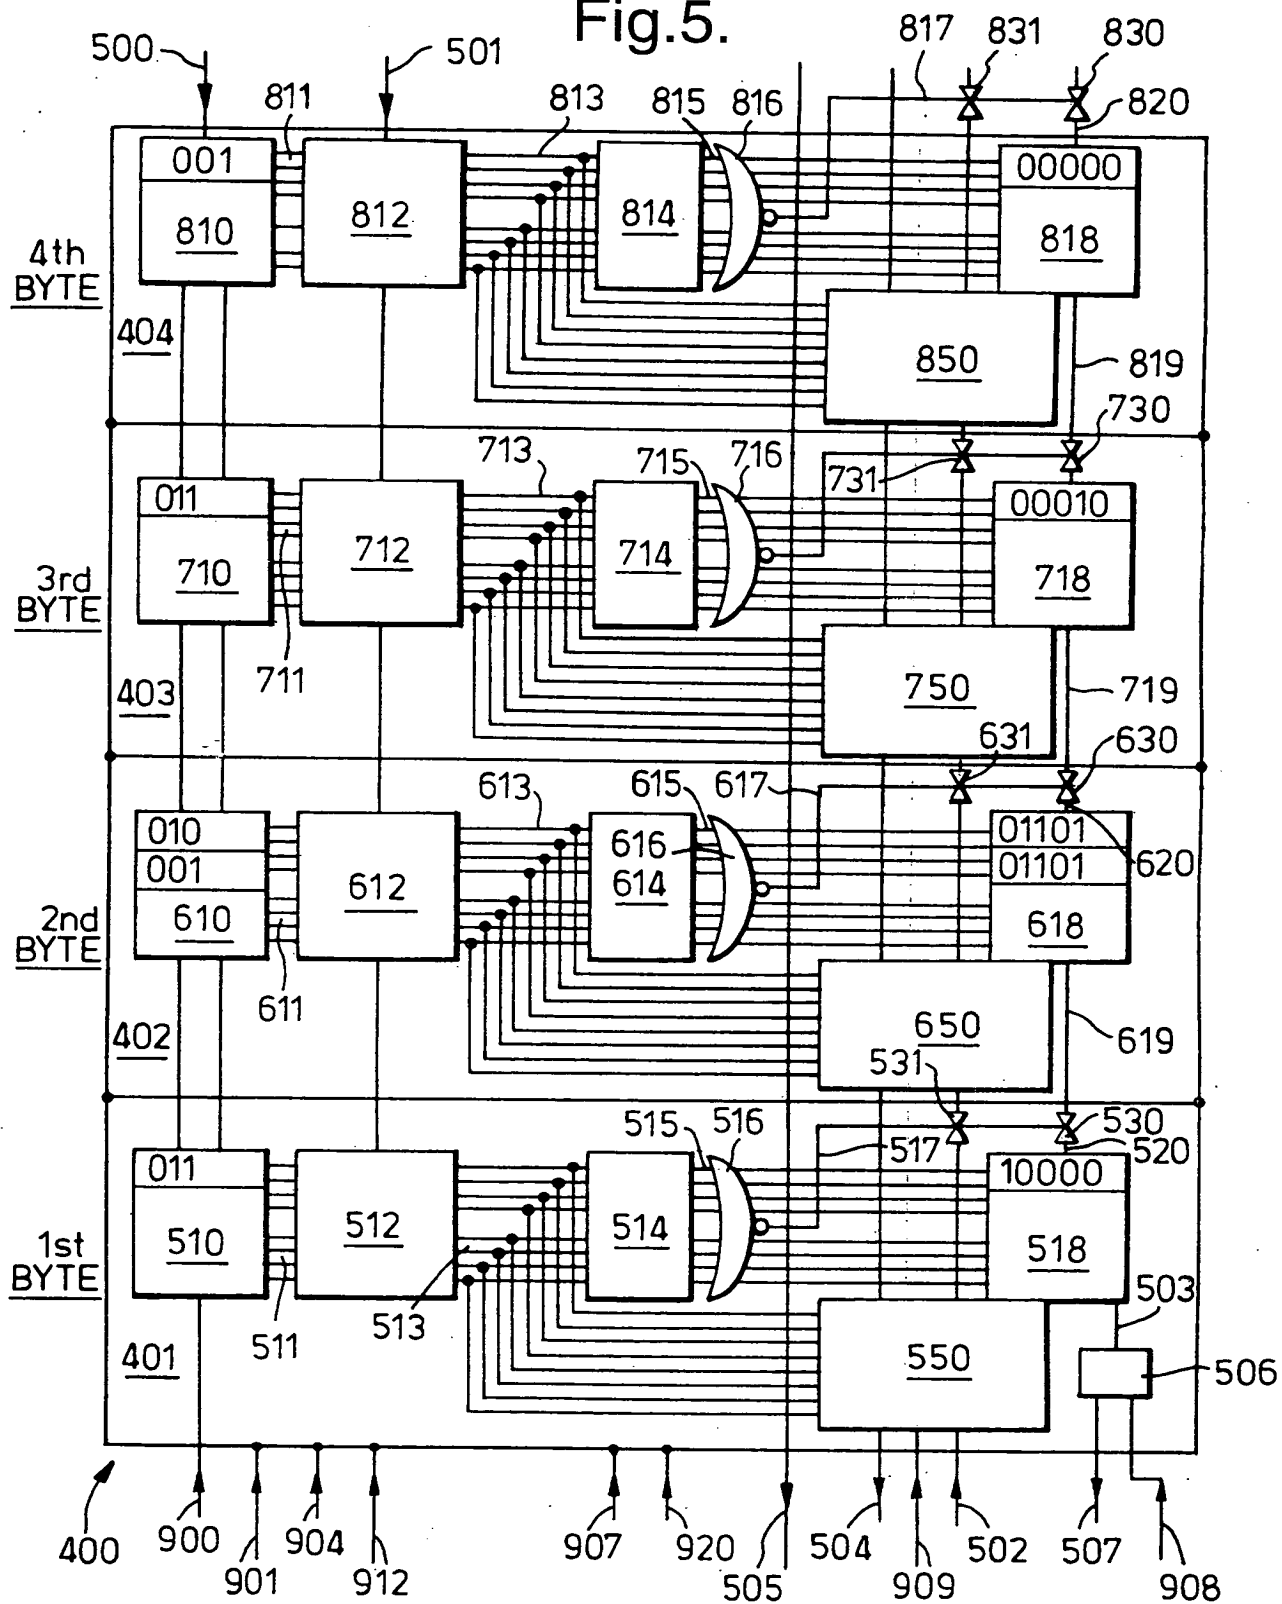
[illegible]

Fig.5.



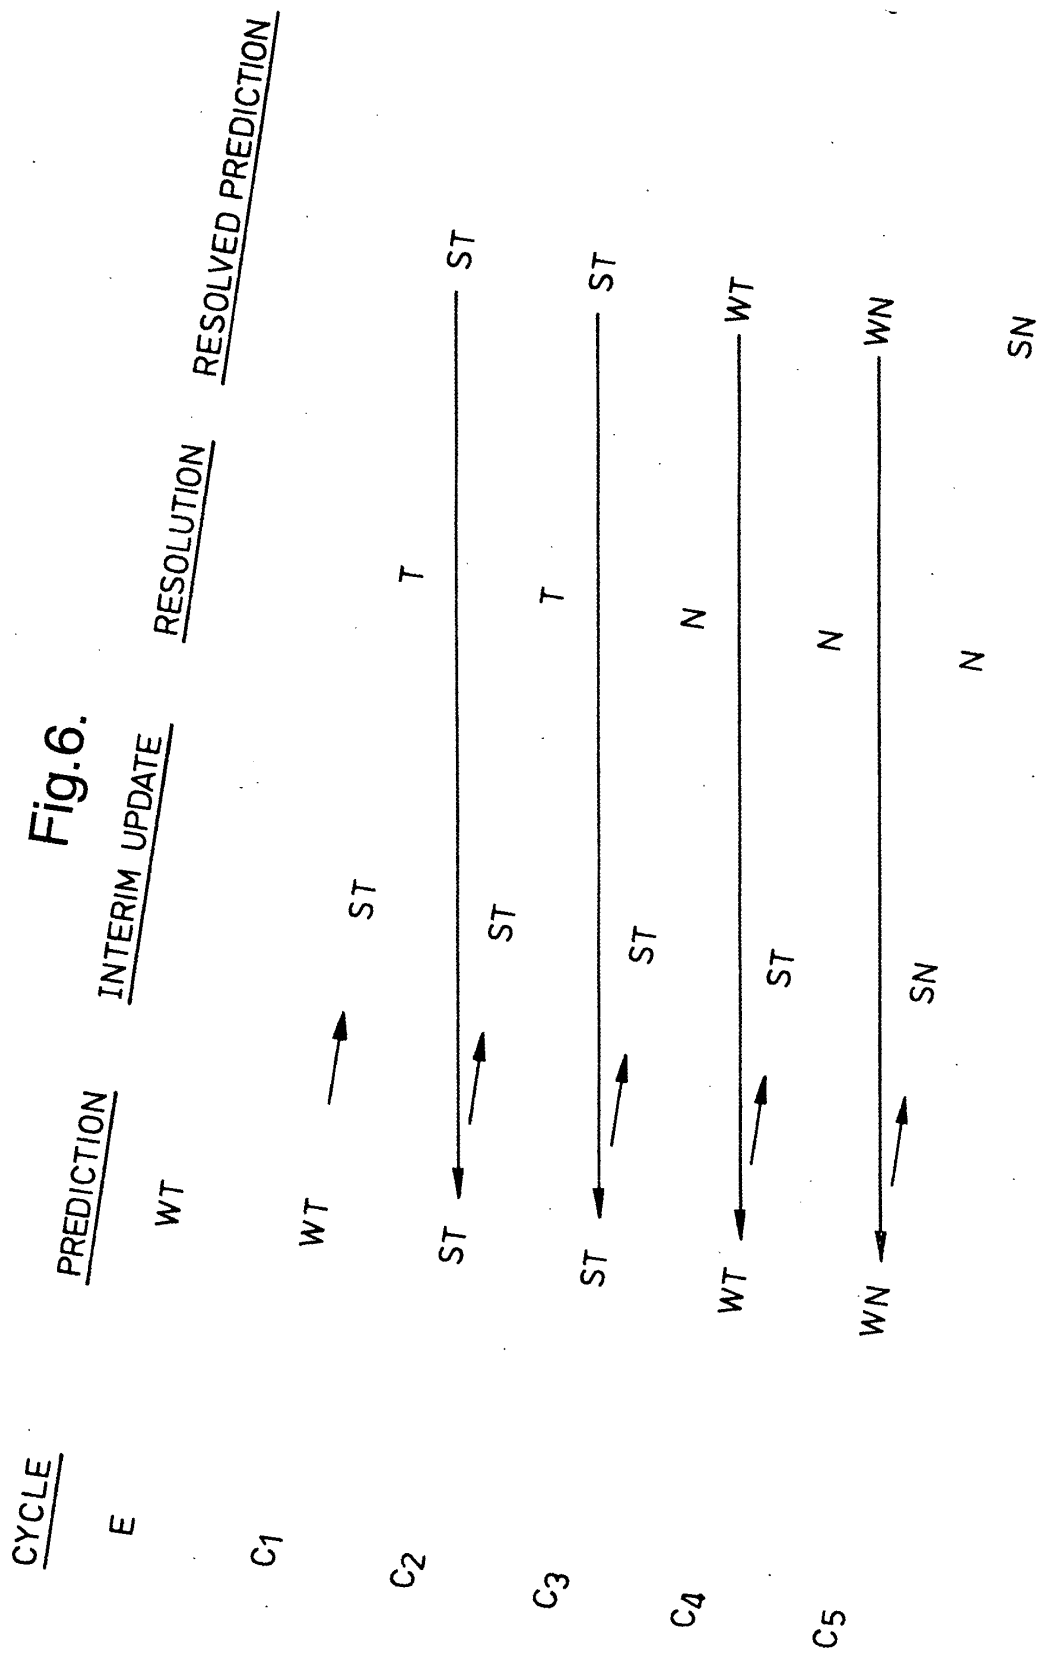


Fig.7.

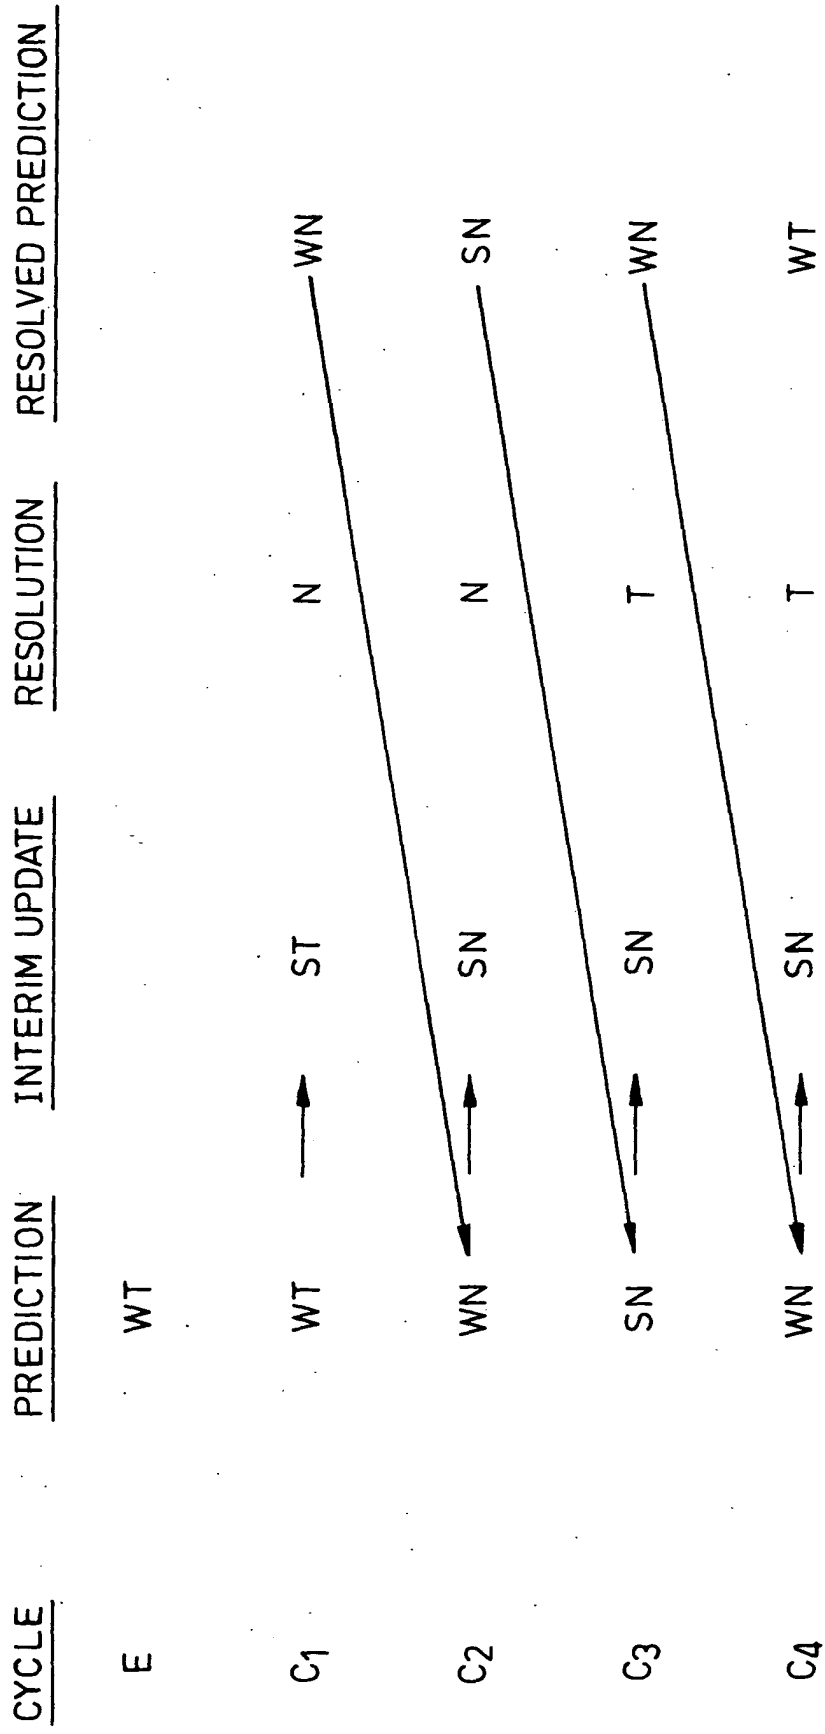


Fig. 8.

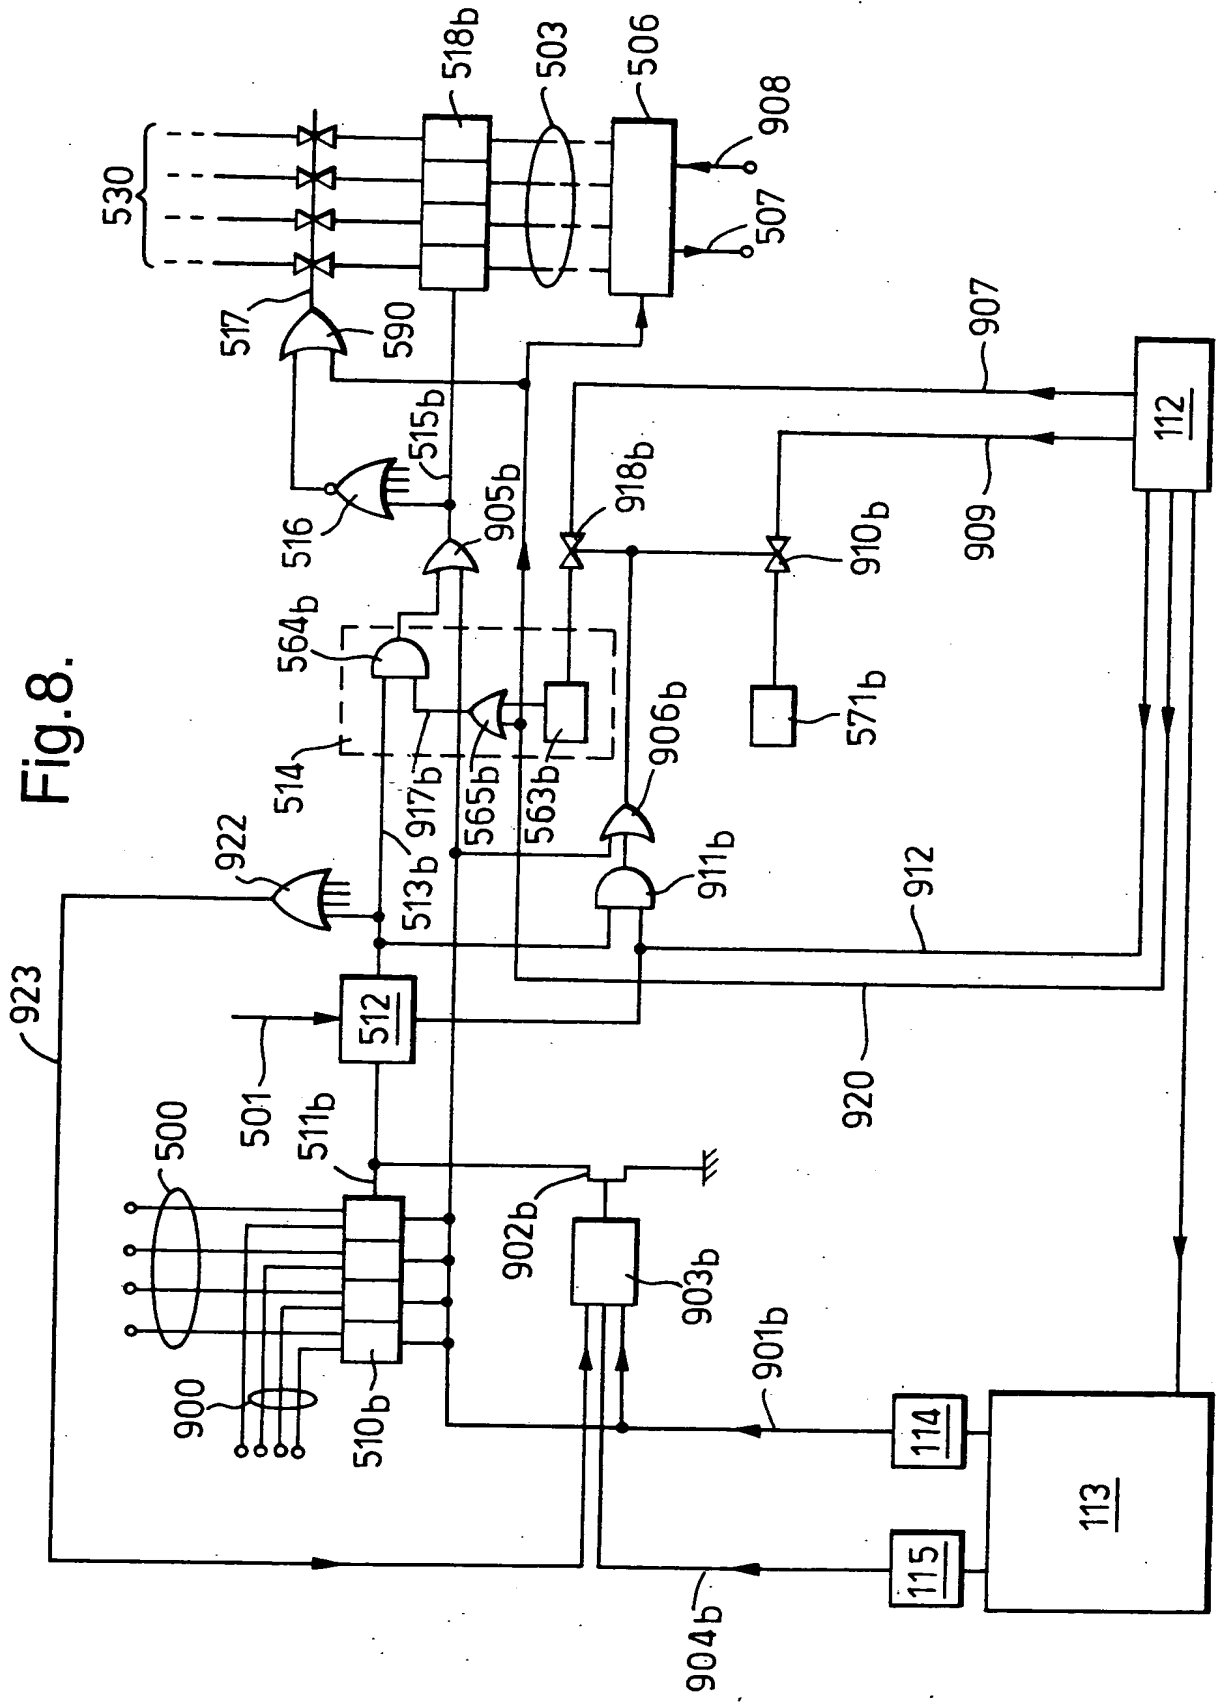


Fig.9.

